



EIB Setup & Operation keyliteroofwindows.com



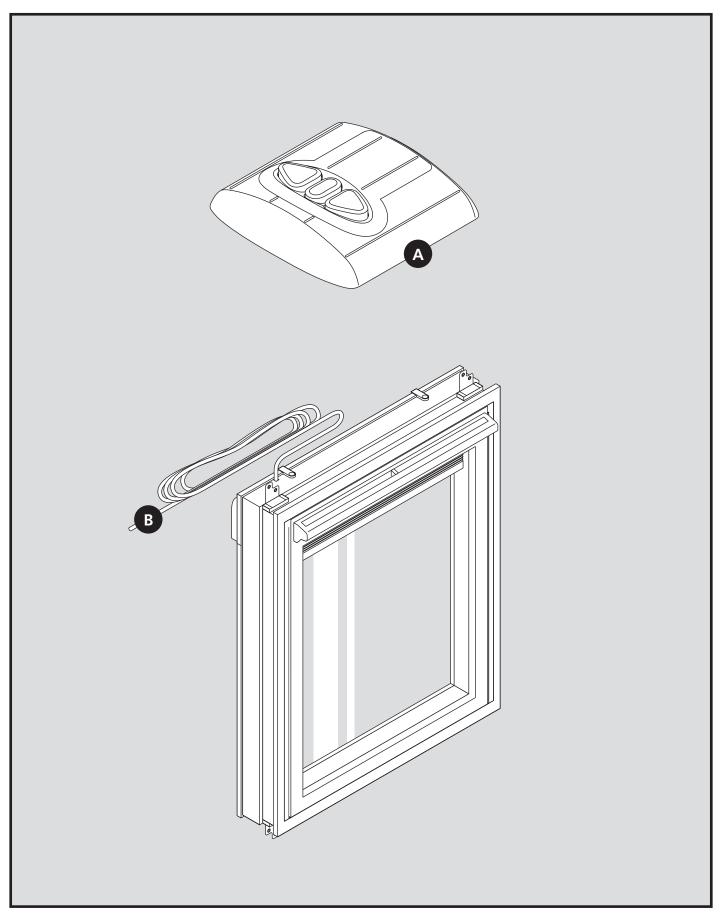

EIB Setup keyliteroofwindows.com

- 24 V DC do not connect to mains supply.
- When extending Electric Integral Blind cable to wall switch (A), only extend the black and red cores.
- The installation of this system must be carried out by a qualified electrician the guarantee will be voided if this is not followed.

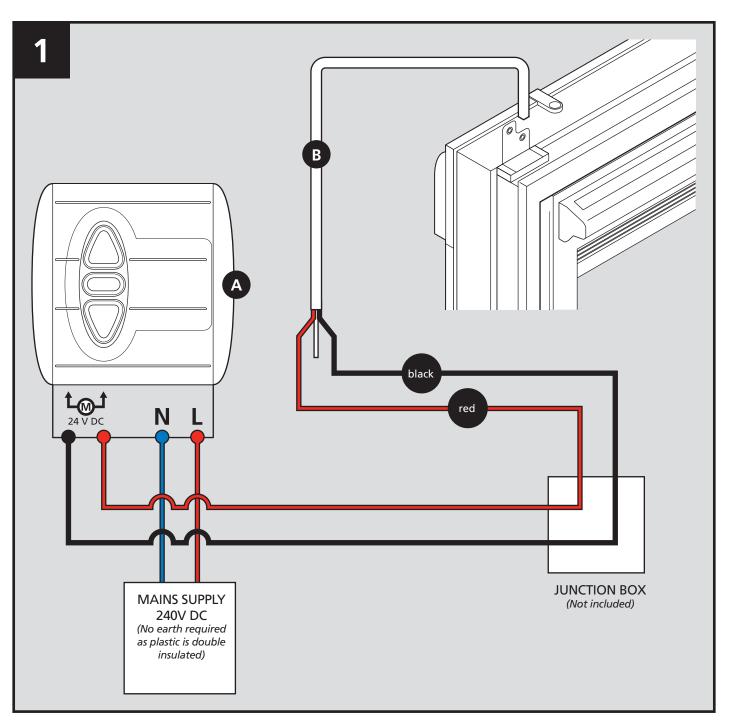



EIB Operation **keyliteroofwindows**.com

